

# MAYFAIR ARMCHAIR - 12189

## PARTS LIST:

A. CHAIR LEG 2 PCS



C. CHAIR SEAT 1 PC



D. CHAIR BACKREST 1 PC



B. WOODEN BAR 1 PC



## HARDWARE:

E. WOODEN DOWELS

12 PCS

F. SCREW


4 PCS

G. SCREW

1 PC


## TOOLS REQUIRED:

H. PHILIPS SCREWDRIVER (NOT INCLUDED)




**NOTE:** Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

1

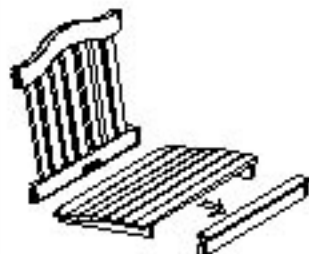

2

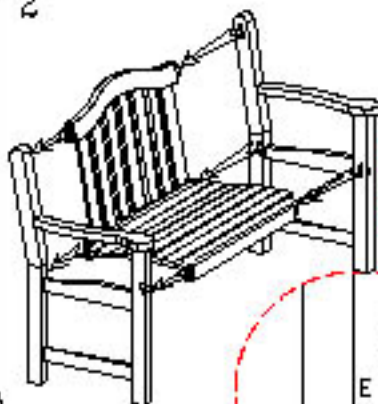

3

