

CURVED BACK ARMCHAIR - 12250

PARTS LIST :

A. CHAIR LEG 2 PCS



C. CHAIR BACKREST 1 PC



B. WOODEN BAR 1 PC



D. CHAIR SEAT 1 PC



HARDWARE :

E. WOODEN DOWELS A

4 PCS



F. WOODEN DOWELS B

8 PCS



G. SCREW A

1 PC



H. SCREW B

4 PCS




TOOLS REQUIRED :


I. PHILLIPS SCREWDRIVER (NOT INCLUDED)



NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

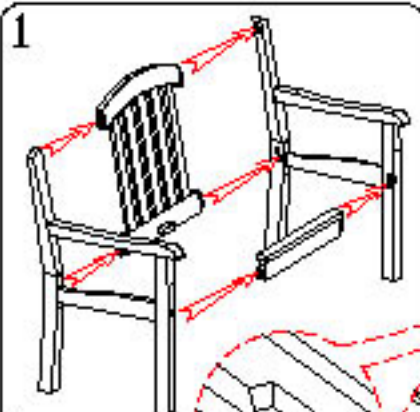

2

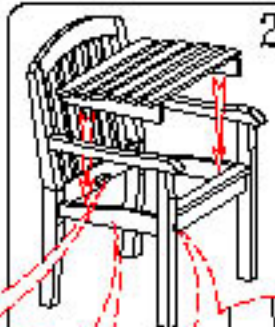

3

