

# MAYFAIR BENCH 4' - 13189

## PARTS LIST :


A. CHAIR LEG 2 PCS



C. CHAIR BACKREST 1PC



B. WOODEN BAR 1PC



D. CHAIR SEAT 1PC



## HARDWARE :

E. WOODEN DOWELS 12 PCS



F. SCREW A 4 PCS



G. SCREW B 2 PCS



## TOOLS REQUIRED :

H. PHILLIPS SCREWDRIVER (NOT INCLUDED)




NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

1



2

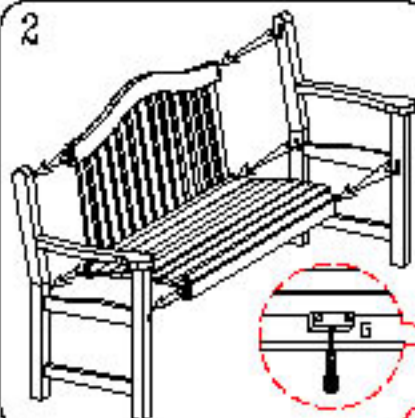

3

