

TRU BENCH 5' WITHOUT BACK - 13929

PARTS LIST :



A. CHAIR LEG 2 PCS

B. SEAT 1 PC

HARDWARE :

C. WOODEN DOWELS

16 PCS

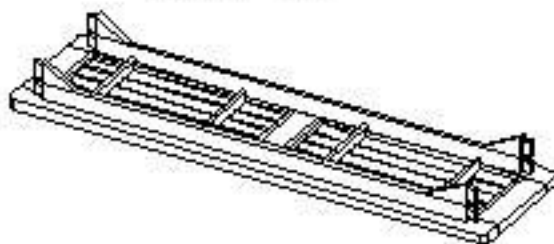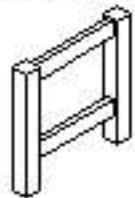

NOTE : Use a soft mallet hammer | not included | to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

