



MONSERRAT TABLE W/O FLEX LEG 15509

PARTS LIST:

A. TABLE LEG 2 PCS

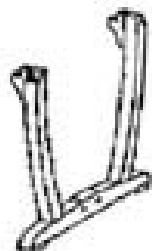

C. TABLE TOP 1 PC

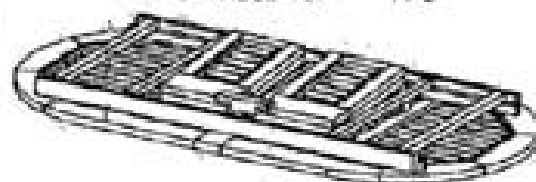

B. CROSS BAR 1 PC



D. BRASS UMBRELLA HOLE CAP 1 PC



HARDWARE:

E. WOODEN DOWELS

4 PCS



F. SCREW

12 PCS




TOOLS REQUIRED:

G. PHILLIPS SCREWDRIVER (NOT INCLUDED)




NOTE: Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

1

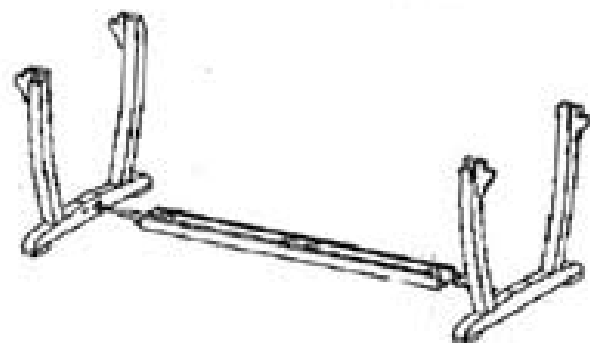


2

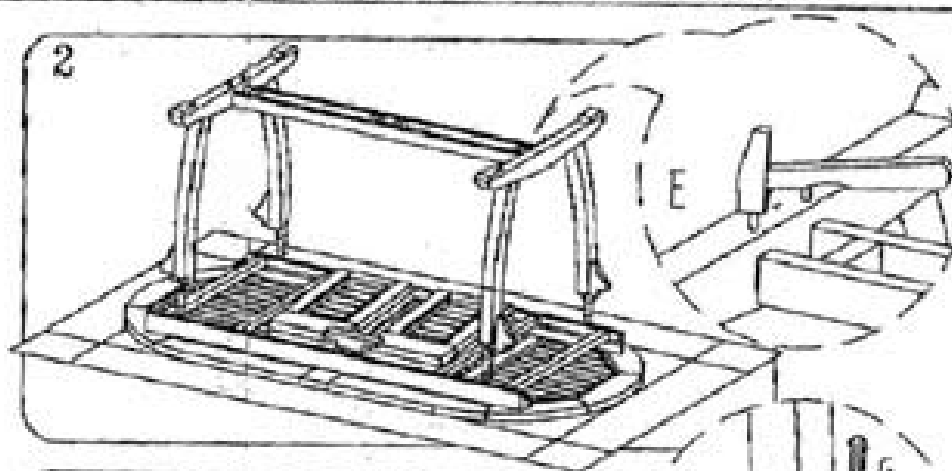

4



3

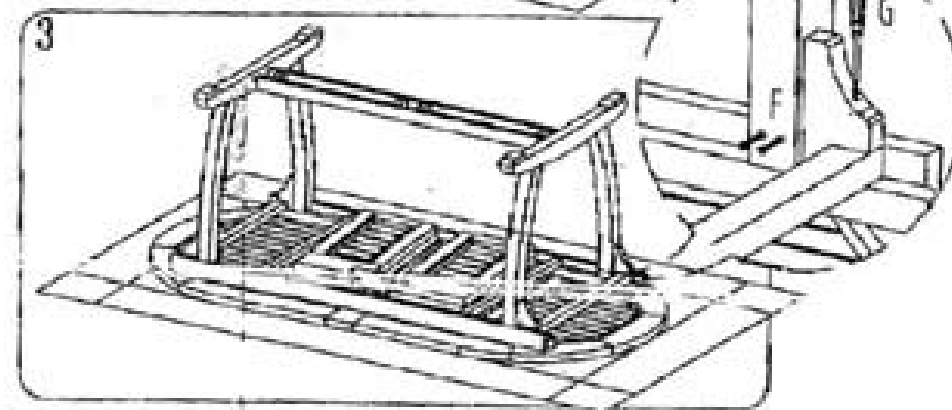

Picture Shown is 15504
bow leg, 15509 is straight leg