




18131 - WESTMINSTER RECTANGULAR PLANTER 20 X 60

PART LIST :

A. FRONT & BACK FRAME 2 PCS B. END FRAME 2 PCS C. BASE FRAME 1 PCE

HARDWARE :

D. WOODEN DOWELS 16 PCS

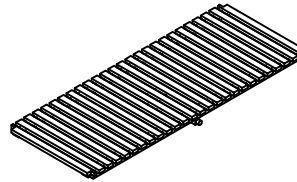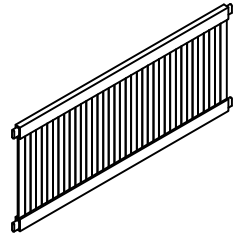

NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowels end flush with surface.

