


CUSHION BOX - 18203

PARTS LIST :

A. SIDE 2 PCS



C. TOP 1 PC

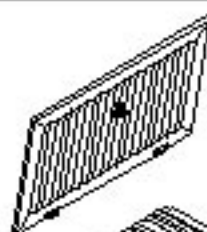

B. SIDE 2 PCS



D. FLOOR 1 PC



HARDWARE :

E. WOODEN DOWELS 16 PCS

F. SCREW 6 PCS



G. RING 1 PC

H. LOCK 1 PC



TOOLS REQUIRED :

I. PHILLIPS SCREWDRIVER (NOT INCLUDED)



NOTE : Use a soft mallet hammer (not included) to prevent marking or denting wood when inserting wood dowels. Do not use excessive force to insert dowels. After inserting wood dowels, minimal sanding may be necessary to make dowel ends flush with surface.

