



REED WALL PANEL (18750)

Assembly Instructions

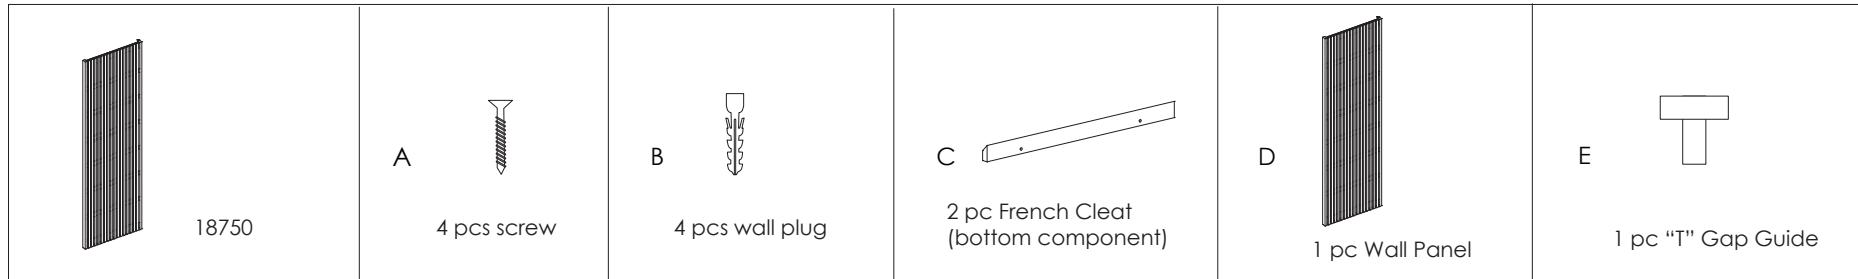

STEP 1

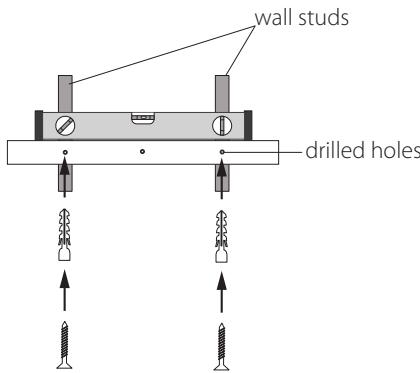


Use a horizontal leveler to ensure proper alignment and level of the placement of the bottom cleat (C) with the wall. Drill 2 holes for each cleat. If possible, locate the wall studs before drilling to ensure a strong anchor for the screws.

1. Drill the holes necessary to insert the wall plug into the wall.
2. Use the screws provided to anchor the bottom cleat.
3. You can add one or more screws if your wall panel does not rest on the floor.

You can install an additional cleat anywhere below the top cleat by measuring the distance from the first to the next lower cleat you want to use.

STEP 2

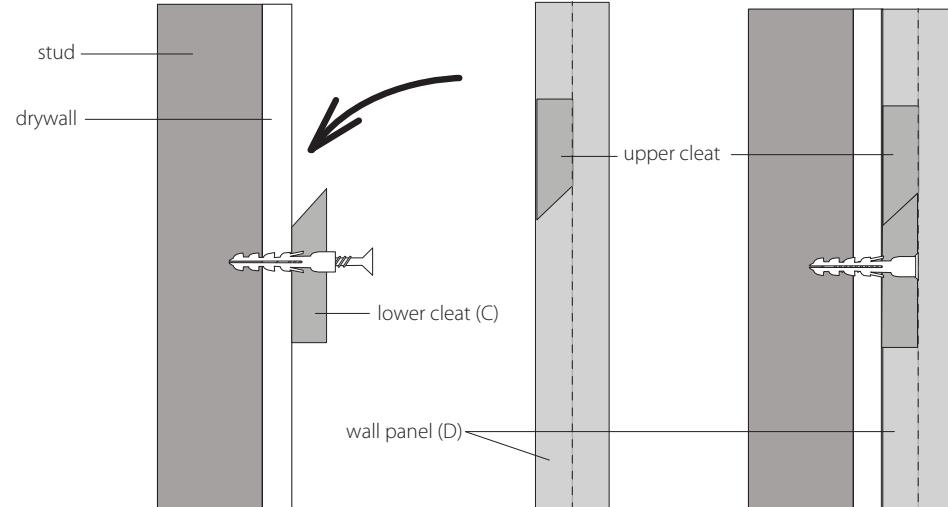

Once the screws are tightened and secure, hang the wall panel, "hooking" the upper over the lower cleat, as shown above.

NOTE: For multiple wall panels hung side by side, use the "T" gap guide (E) to ensure that the correct alignment between 2 panels that are hung alongside one another.

See Figure 1. Place the "T" guide at the top and in between the panels so they are at "gap" distance between them, so as to give the panels a continuous slatted appearance.

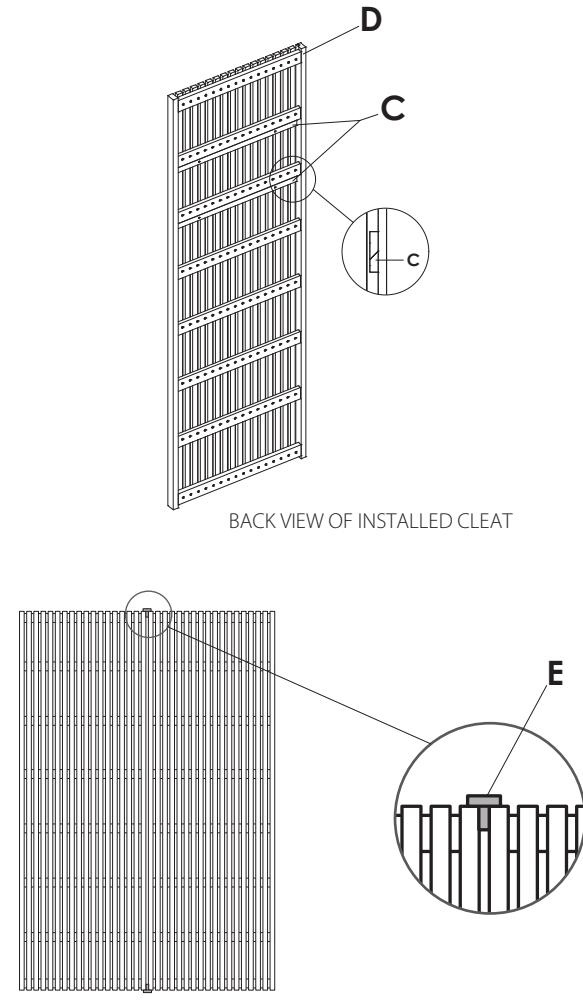


figure 1. Installing 2 or more panels