

# SQUARE UMBRELLA BASE


ASSEMBLY INSTRUCTIONS AND USER MANUAL FOR 58104 TB, 58104 SA, AND 58104 SW



WESTMINSTER TEAK


## ASSEMBLING THE BASE

1. Secure the stem to the umbrella base with the M10x40mm bolts and PE spacer, tighten with the supplied allen key.

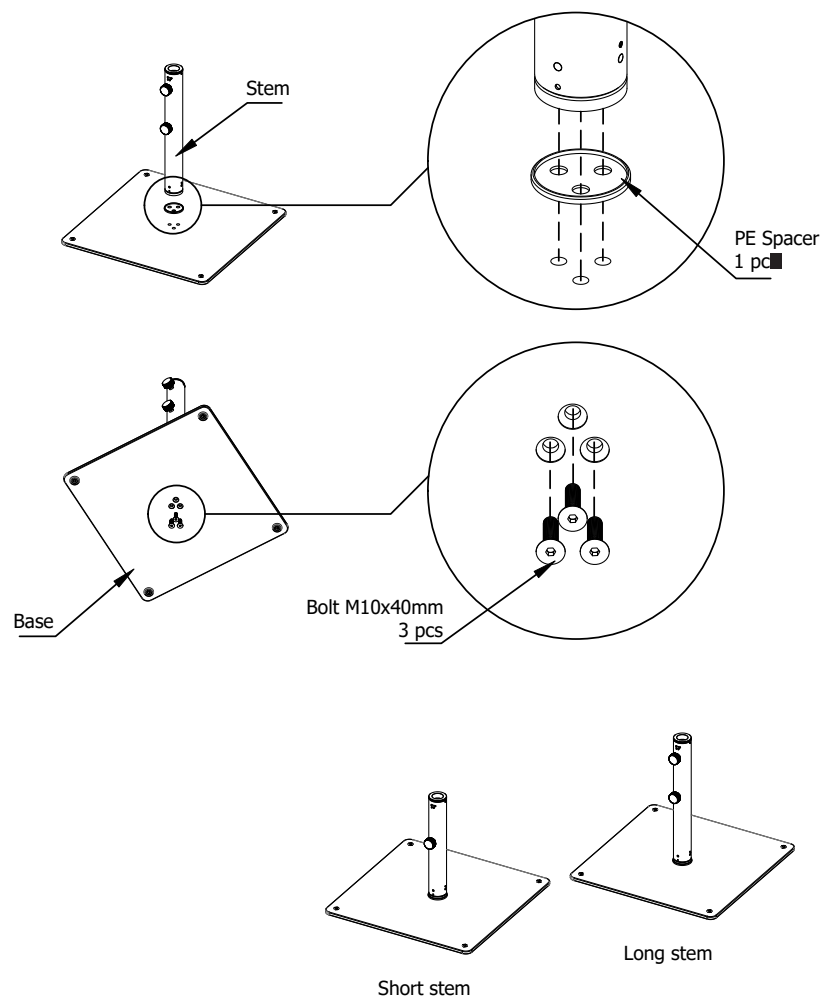


## DOUBLE STACKING BASE PLATES

Line up the cavity on the bottom of the plastic glides with the plastic protrusions at the top of the double stack plate (sold separately). Then secure the both base plates to the stem with the M10x40mm bolts and PE spacer, tighten with the supplied allen key.

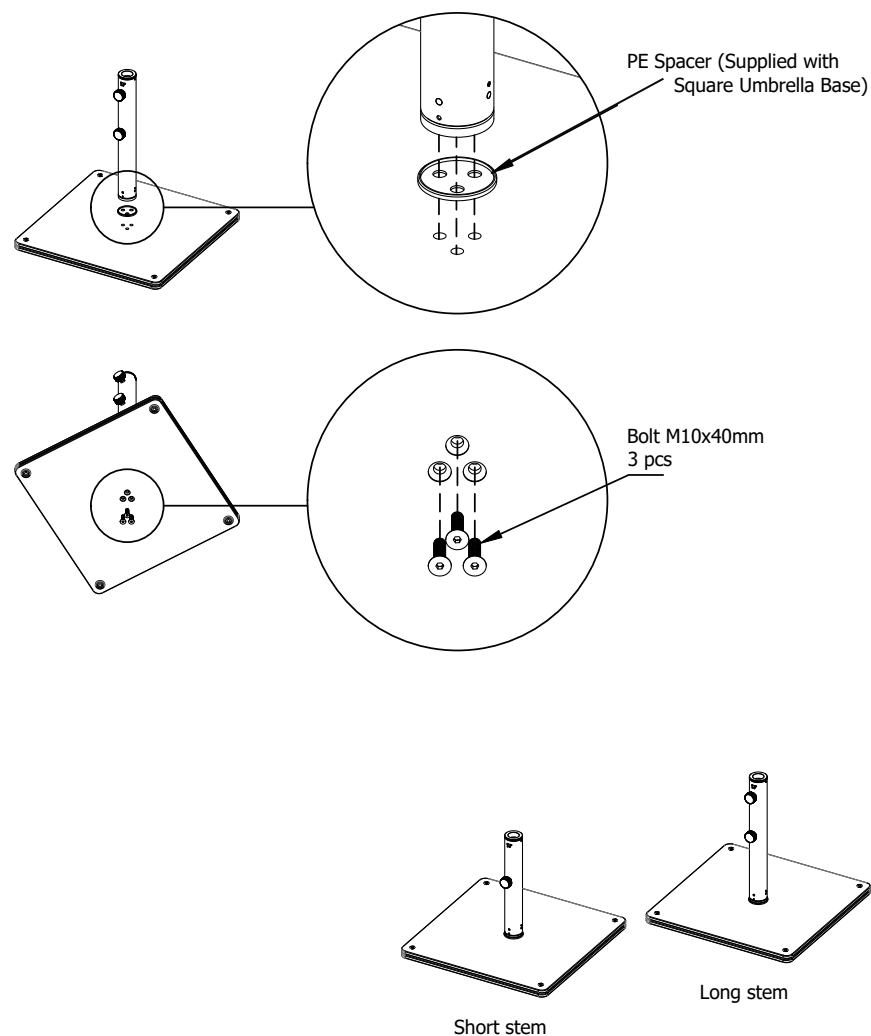


## ATTACHING OPTIONAL WHEELS

1. Secure the wheels (sold separately) to the umbrella base with the supplied M10x40mm bolts, plastic spacers and nyloc nuts. Tighten the bolts and nuts with the supplied allen key and spanner.

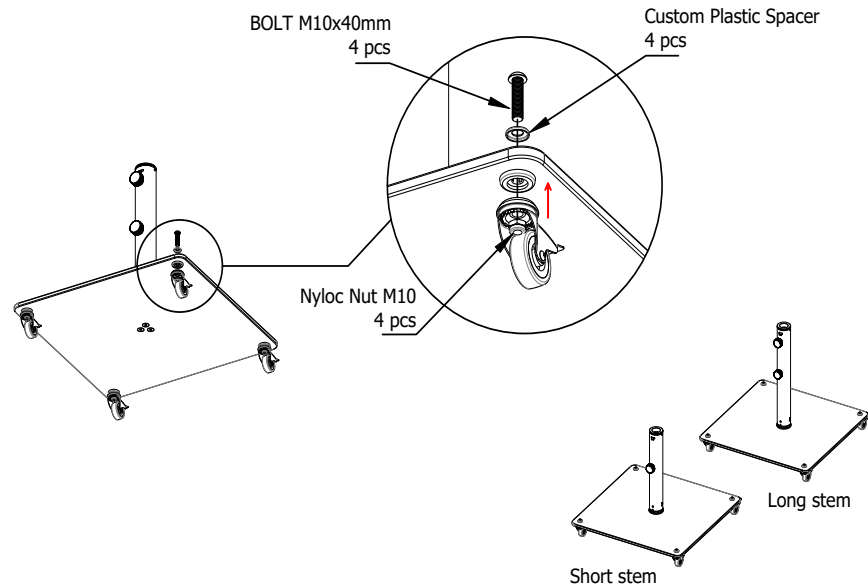


## TO SET-UP WITH AN UMBRELLA

- 1a. The base comes setup for use with umbrella poles that are 38 mm / 1 1/2 inch or less in diameter.

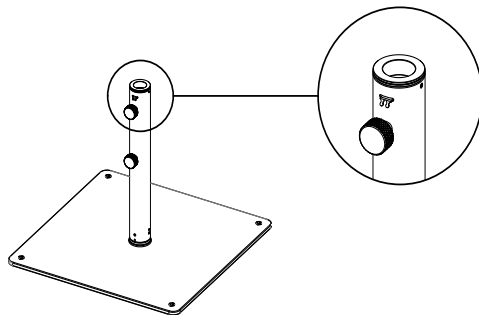

- 1b. For use with umbrella poles that around 50 mm / 2 inch in diameter, loosen the two dome head bolts that secure the pole adapters in place. Remove the small adapter, then return the large adapter and secure it to the stem with the dome head bolts and PE washers.  
- For umbrella poles that larger than 54 mm / 2 1/8 inch in diameter remove both pole adaptors.

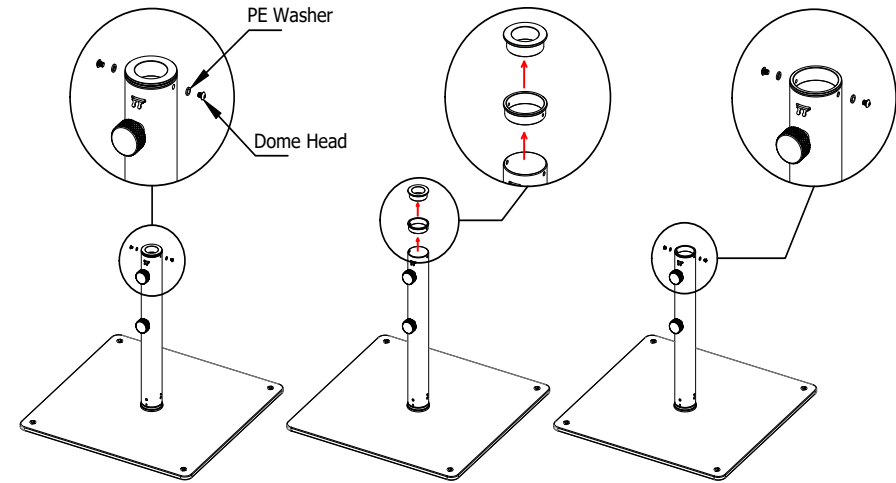

2. Insert the umbrella pole into the stem, then secure it in place by tightening the knobs (turn clockwise).

